
# POINT SUN UN TIME 4319 #319 STRUCTION

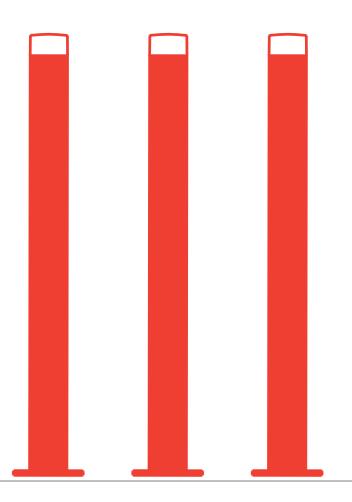

#319 POINT SUN - MOUNTING 10.01 2017

## **INSTALLATION**

No cables are required for the light unit to operate.

Notice that the unit must be installed at least 6 months after delivery to maintain full operability.

# **OPTIMAL LOCATION**

Make sure to place the bollard with open view to the sky, and avoid trees and any other overhangs to ensure the unit is fully exposed to sunlight. It is also recommended to place the unit in areas free of dominant artifical light.

### **MAINTENANCE**

Maintenance-free, except for change of battery after approximately 6 years.

 
Keep top free of dirt to ensure optimum sun-capture.

### 1. INSTALL LIGHT UNIT

1:

Place light unit in tube.


Make sure the pinhole in unit aligns with threaded hole in tube.



row M6


Screw M6 security pin (included) into tube until faces are aligned.

Use special bit (included).

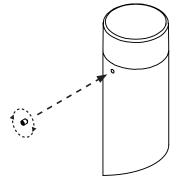

#319 POINT SUN - MOUNTING 10.01 2017

# **2A. FLANGE VERSION WITH BOLTS**

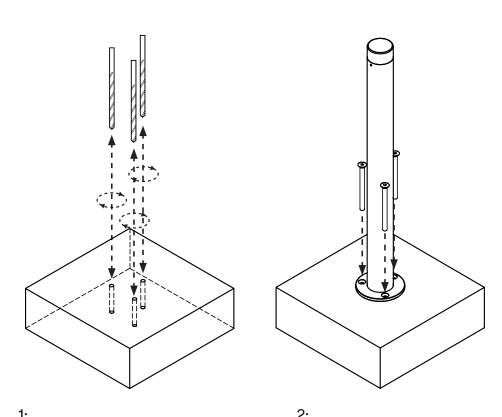


\*Use countersunk bolts (not included) for concrete or equivalent metric bolts with inserts.

Mount bollard and fasten

bolts\* (max Ø10mm).

# **2B. BURIED VERSION**

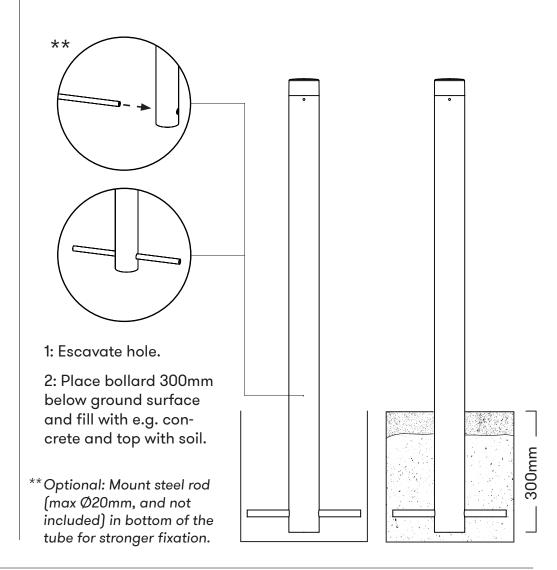

Drill 3× holes in an ø115 circle,

120° spacing between holes.