


SUNSTONE #12

MOUNTING INSTRUCTION

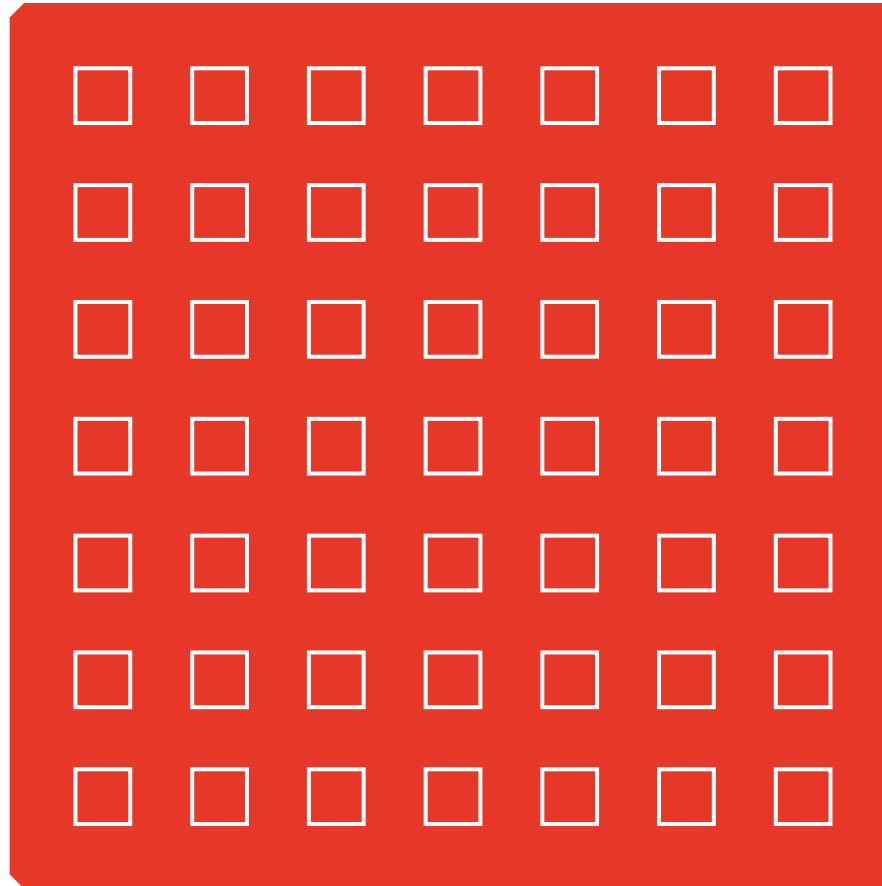

SUBTERRANEAN MOUNTING OF SQUARE SUNSTONE

- Place Sunstone in an open area not overshadowed by trees, pergolas, roof overhangs or other elements blocking sun rays.
- Place Sunstone in an area free of dominant artificial light to meet the operating requirement of less than 50 lux.
- Mount in a hole (product is 97×97mm.) to fit product and fix into place with concrete/tile adhesive, and glue optionally to the edge with silicone.
- Sunstone requires approx. 2 days of light absorption to reach operational mode.

MAINTENANCE

- Maintenance-free (Sunstone must be kept uncovered of leaves / soil etc.).
- No wear parts (energy storage takes place in super-capacitors).

